

Kia Rio Model Maintenance Schedule

Engine control system

MAINTENANCE INTERVALS	Kilometers or time in months, whichever comes first																
	× 1,000 km	8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128
	# Months	4	8	12	16	20	24	28	32	36	40	44	48	52	56	60	64
Engine oil & engine oil filter (1)	Replace every 6,000 km or 6 months.																
Drive belts (tension)				I					I				I				I
Cooling system hoses & connections			I				I			I			I			I	
Engine coolant (1)	I	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I
Fuel filter								R							R		
Fuel tank cap, lines, EVAP canister and hoses							I						I				
Fuel tank air filter			I				R			I			R			I	
Air cleaner element (2)	I	I	I	I	I	I	R	I	I	I	I	I	R	I	I	I	I
Ignition wires							I						I				
Spark plugs							R						R				
Idle speed			I				I			I			I			I	
Engine timing belt													R				